

Last Updated 03/01/09

BASE TRANSMIT	MOBILE TRANSMIT	LOCOMOTIVE CHANNEL	DESCRIPTION OF USAGE
--------------------------	----------------------------	-------------------------------	-----------------------------

Amtrak

Amtrak trains use the local road channel of the hosting railroad for primary train operations, in addition to the following specific channels:

161.1900	161.1900	7272	Crew channel at Fort Worth Intermodal Transportation Center
160.4400	160.4400	2222	Switching in New Orleans Union Passenger Terminal, LA
161.0550	161.0550	6363	Road Channel in New Orleans Union Passenger Terminal, AR
160.3350	161.4150	8715	Amtrak police in New Orleans, LA
160.4550	160.4550	2323	Station Services in large terminals
161.4450	161.4450	8989	Licensed in New Orleans -- Usage Unknown

Dallas Area Rapid Transit (DART)

856.2375 (repeater)	811.2375		F1--Mainline Operations
857.2375 (repeater)	812.2375		F2--Yard Operations
858.2375 (repeater)	813.2375		F3--Maintenance of Way
859.2375 (repeater)	814.2375		F4--Emergencies and Administration
860.2375 (repeater)	815.2375		F5--Transit Police

New Mexico Railrunner

160.4100	160.4100	2020	Road Channel Belen to Albuquerque to Waldo to Santa Fe
161.1600	161.1600	7070	Switching Channel

Trinity Rail Express

161.0400	161.0400	6262	TRE Dallas to Fort Worth Road & Dispatcher
161.4300	161.4300	8888	TRE Yard & Miscellaneous
161.1450	161.1450	6969	UP Mineola Sub Dispatcher (Dallas Terminal)